


POWER OUTLET SOCKET

COMPONENTS

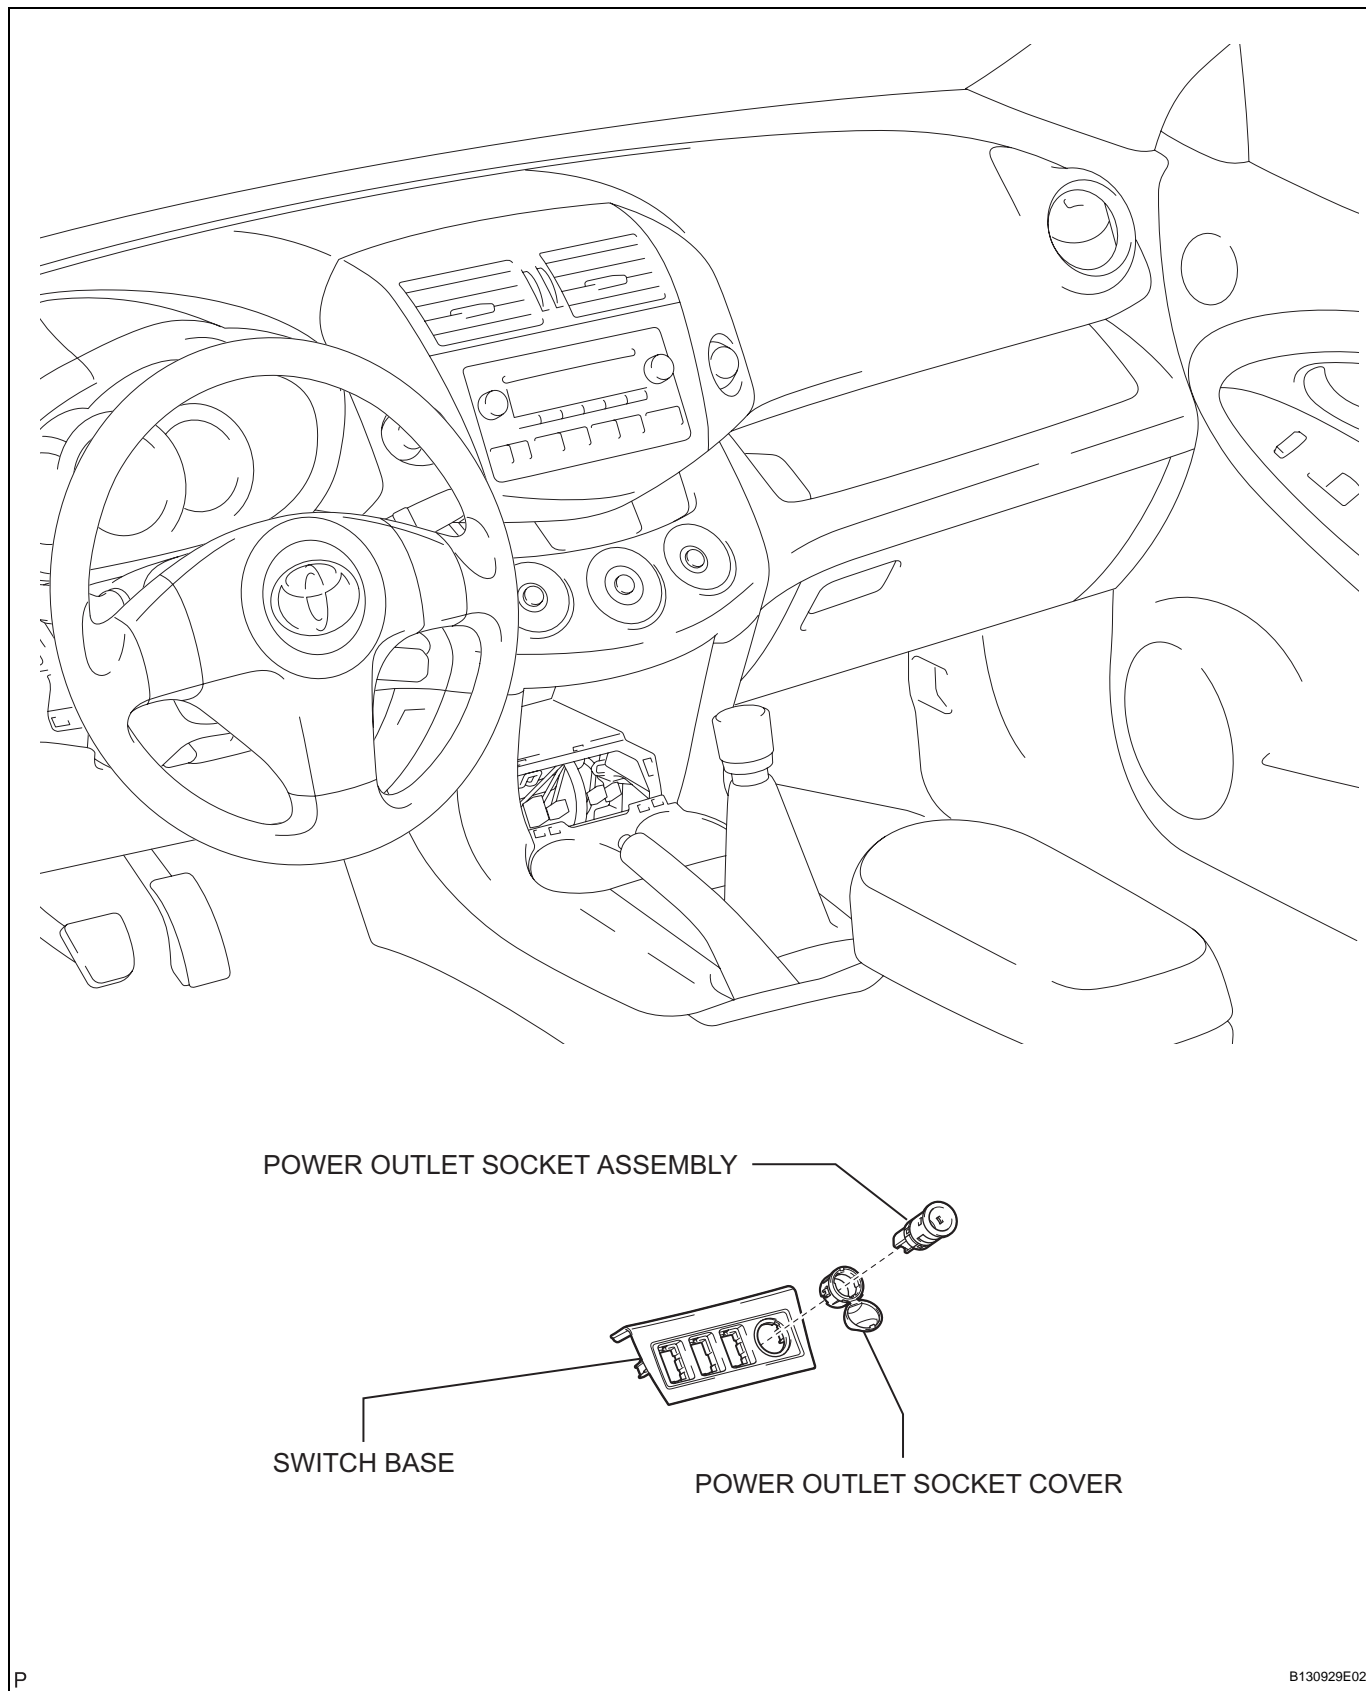



REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE SWITCH BASE** (See page [IP-21](#))
3. **REMOVE POWER OUTLET SOCKET ASSEMBLY**
 - (a) Rotate the socket to disengage the notch.

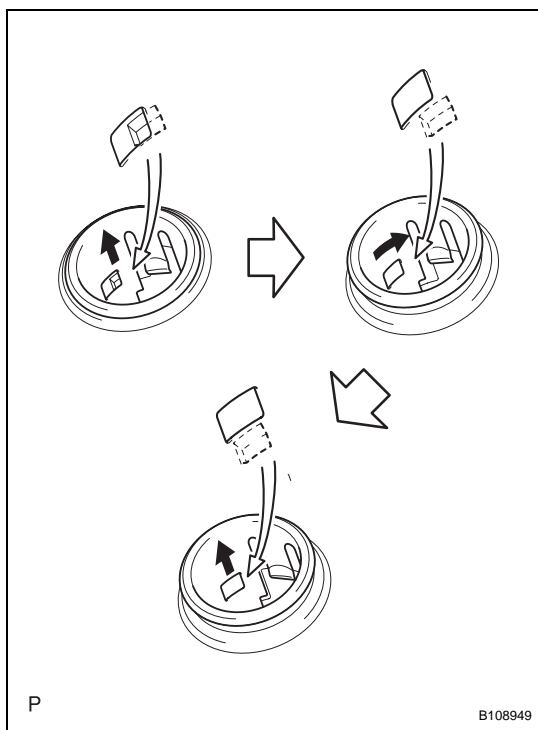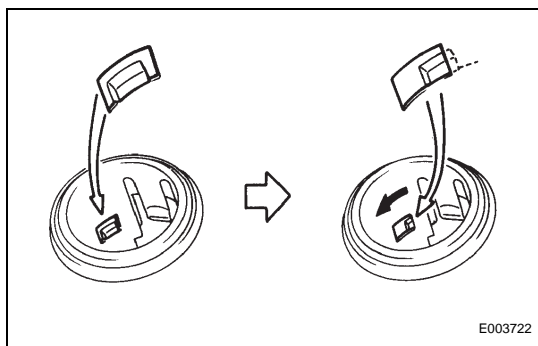

- (b) Pull out the socket halfway and rotate the socket until its protrusion is aligned with the groove of the cover.
- (c) Remove the socket from the cover.

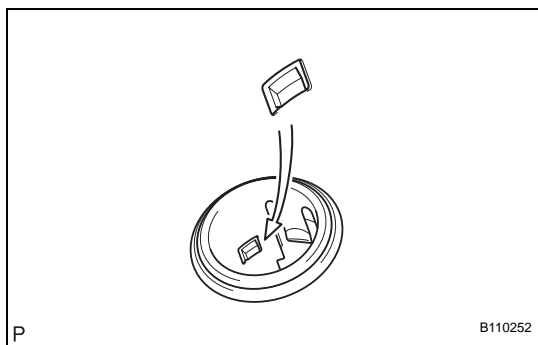

INSTALLATION

1. **INSTALL POWER OUTLET SOCKET ASSEMBLY**


- (a) Align the protrusion on the backside of the socket with the groove of the cover. Then push the socket into the cover.

2. **INSTALL SWITCH BASE** (See page [IP-24](#))

3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

CENTER POWER OUTLET SOCKET

COMPONENTS

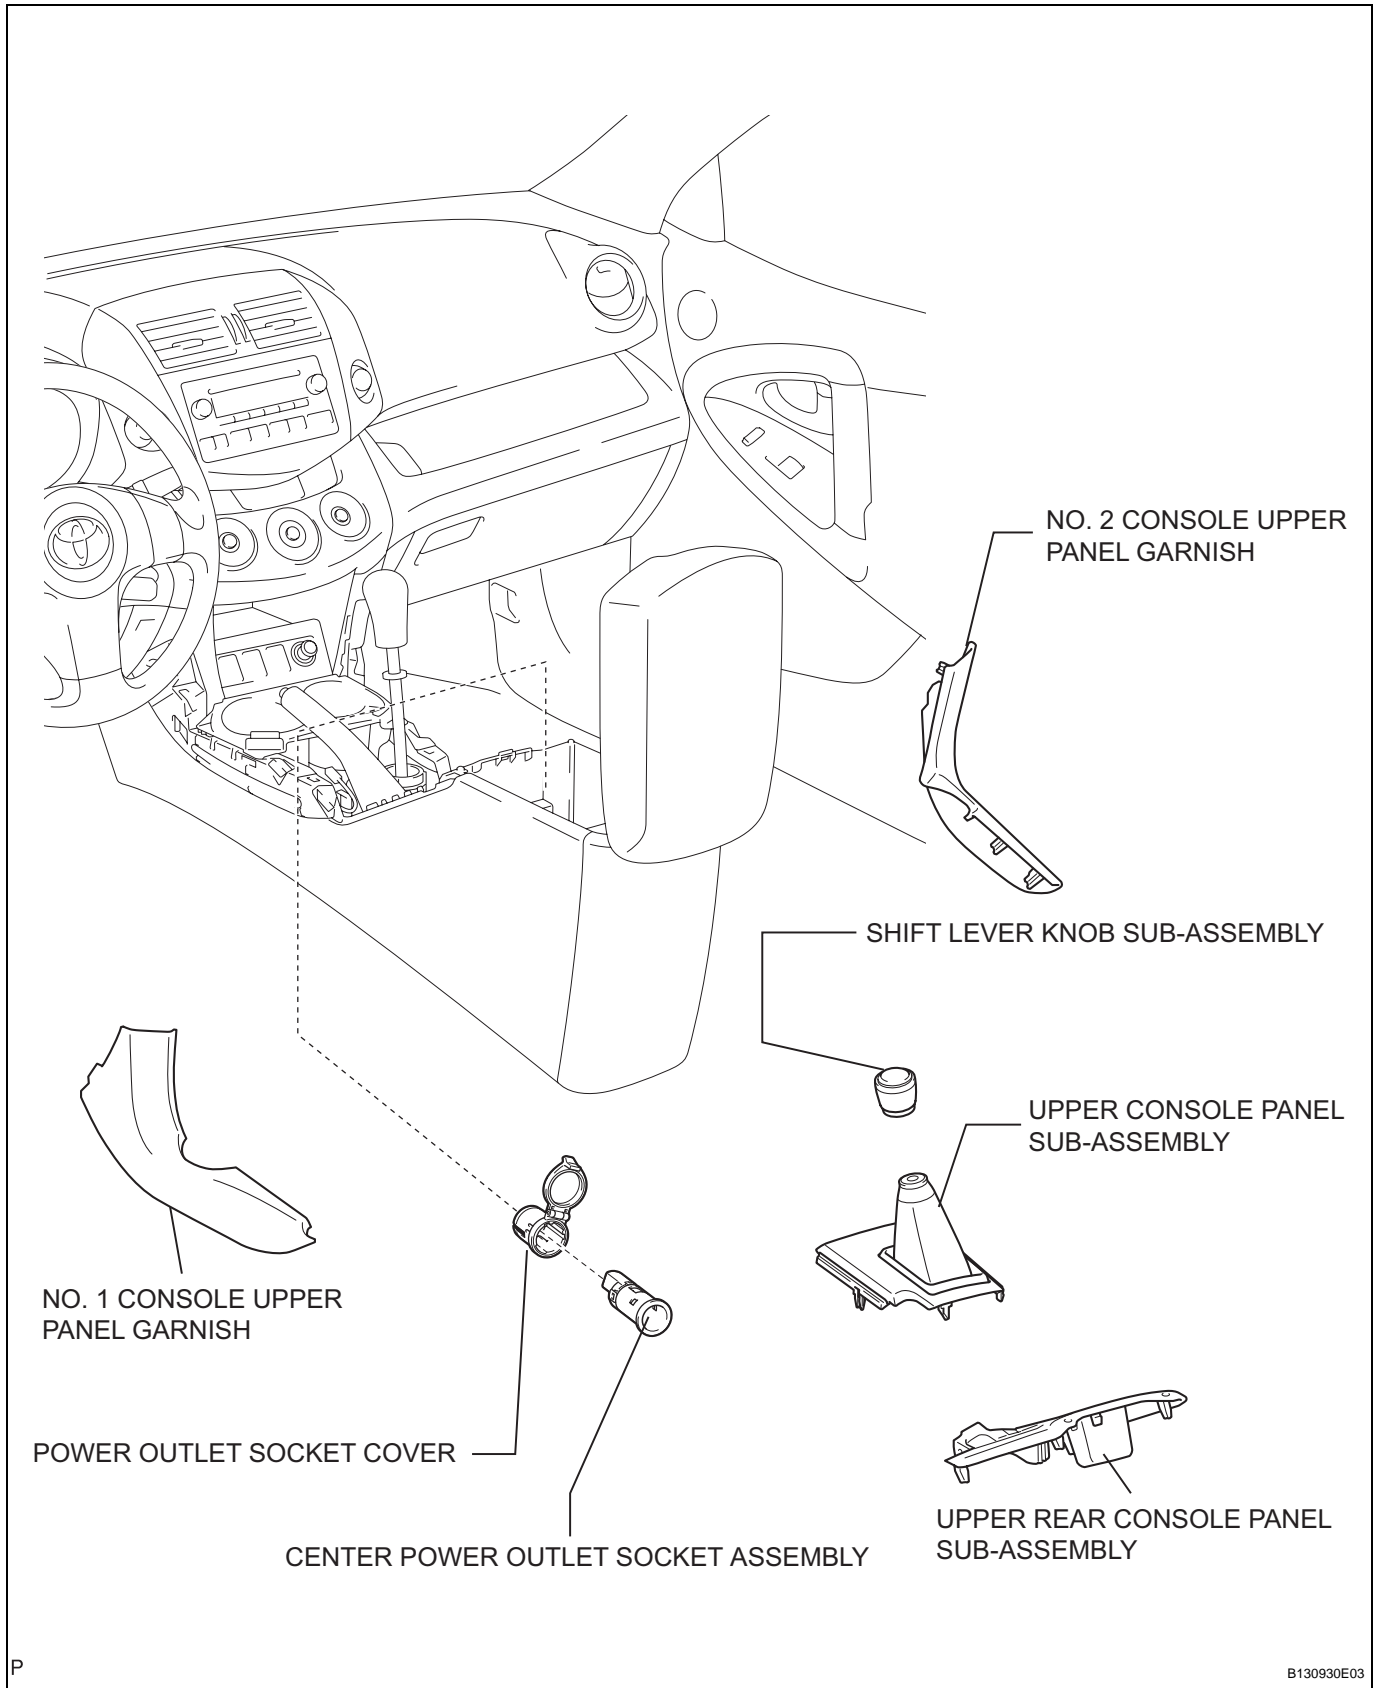

REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. REMOVE NO. 1 CONSOLE UPPER PANEL GARNISH (See page [IP-17](#))
3. REMOVE NO. 2 CONSOLE UPPER PANEL GARNISH (See page [IP-18](#))
4. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY
5. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY (See page [IP-18](#))
6. REMOVE UPPER REAR CONSOLE PANEL SUB-ASSEMBLY (See page [IP-19](#))
7. REMOVE CENTER POWER OUTLET SOCKET ASSEMBLY

- (a) Rotate the socket to disengage the notch.

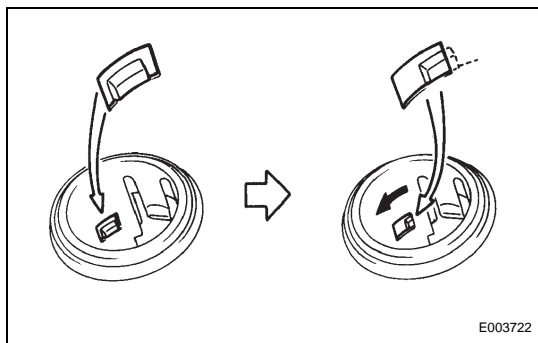

- (b) Pull out the socket halfway and rotate the socket until its protrusion is aligned with the groove of the cover.
- (c) Remove the socket from the cover.

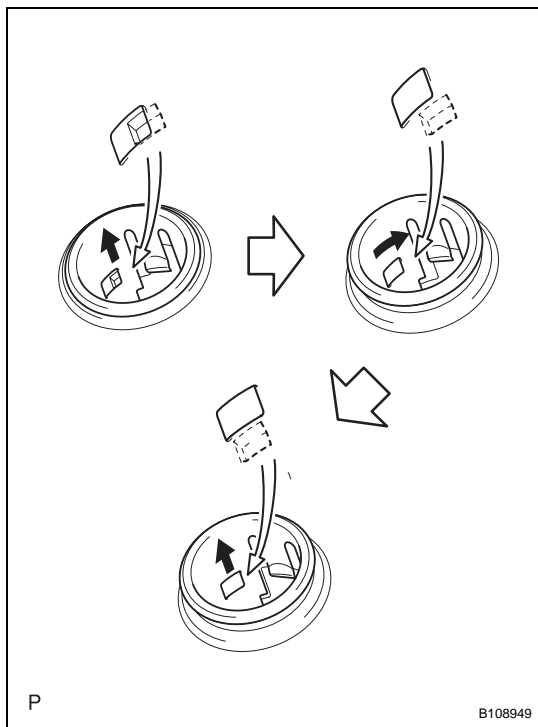

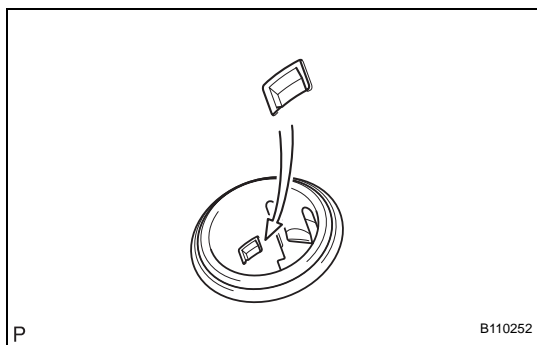

INSTALLATION

1. INSTALL CENTER POWER OUTLET SOCKET ASSEMBLY

- (a) Align the protrusion on the backside of the socket with the groove of the cover. Then push the socket into the cover.

2. INSTALL UPPER REAR CONSOLE PANEL SUB-ASSEMBLY (See page [IP-27](#))

3. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY (See page [IP-27](#))

4. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY


5. INSTALL NO. 2 CONSOLE UPPER PANEL GARNISH (See page [IP-28](#))

6. INSTALL NO. 1 CONSOLE UPPER PANEL GARNISH (See page [IP-28](#))

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

CENTER POWER OUTLET SOCKET (for AC Power Supply)

COMPONENTS

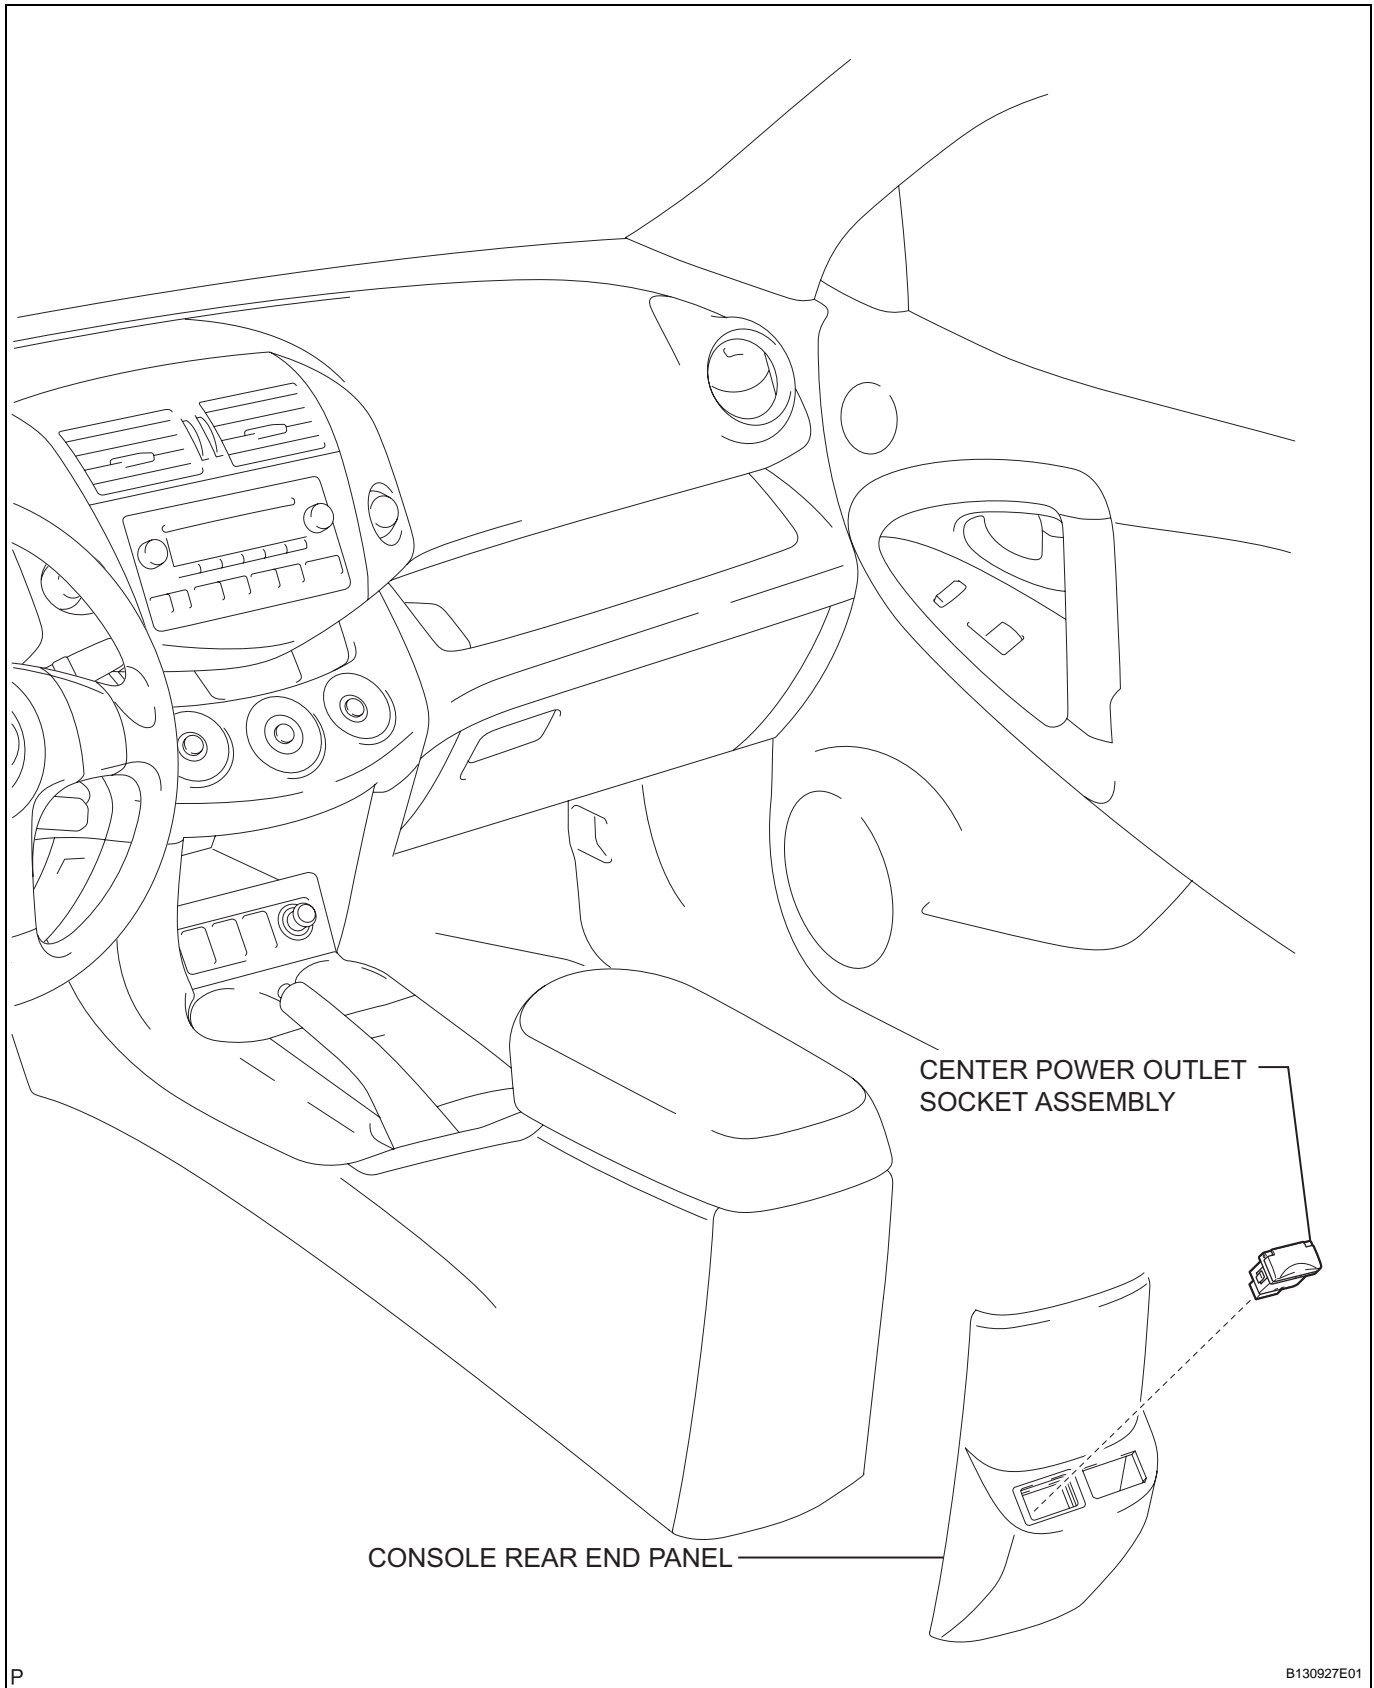

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**



CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE CONSOLE REAR END PANEL** (See page [IP-19](#))

3. **REMOVE CENTER POWER OUTLET SOCKET ASSEMBLY**

- (a) Disconnect the connector.
- (b) Detach the 2 claws and remove the power outlet.

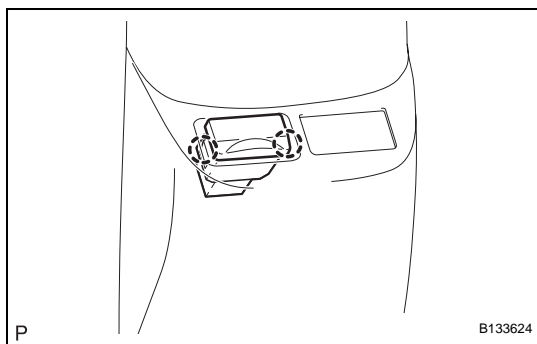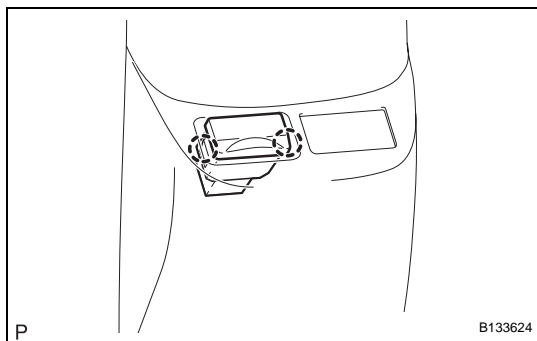

INSTALLATION

1. **INSTALL CENTER POWER OUTLET SOCKET ASSEMBLY**


- (a) Attach the 2 claws to install the voltage inverter.
- (b) Connect the connector.


2. **INSTALL CONSOLE REAR END PANEL** (See page [IP-27](#))

3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

REAR POWER OUTLET SOCKET

COMPONENTS

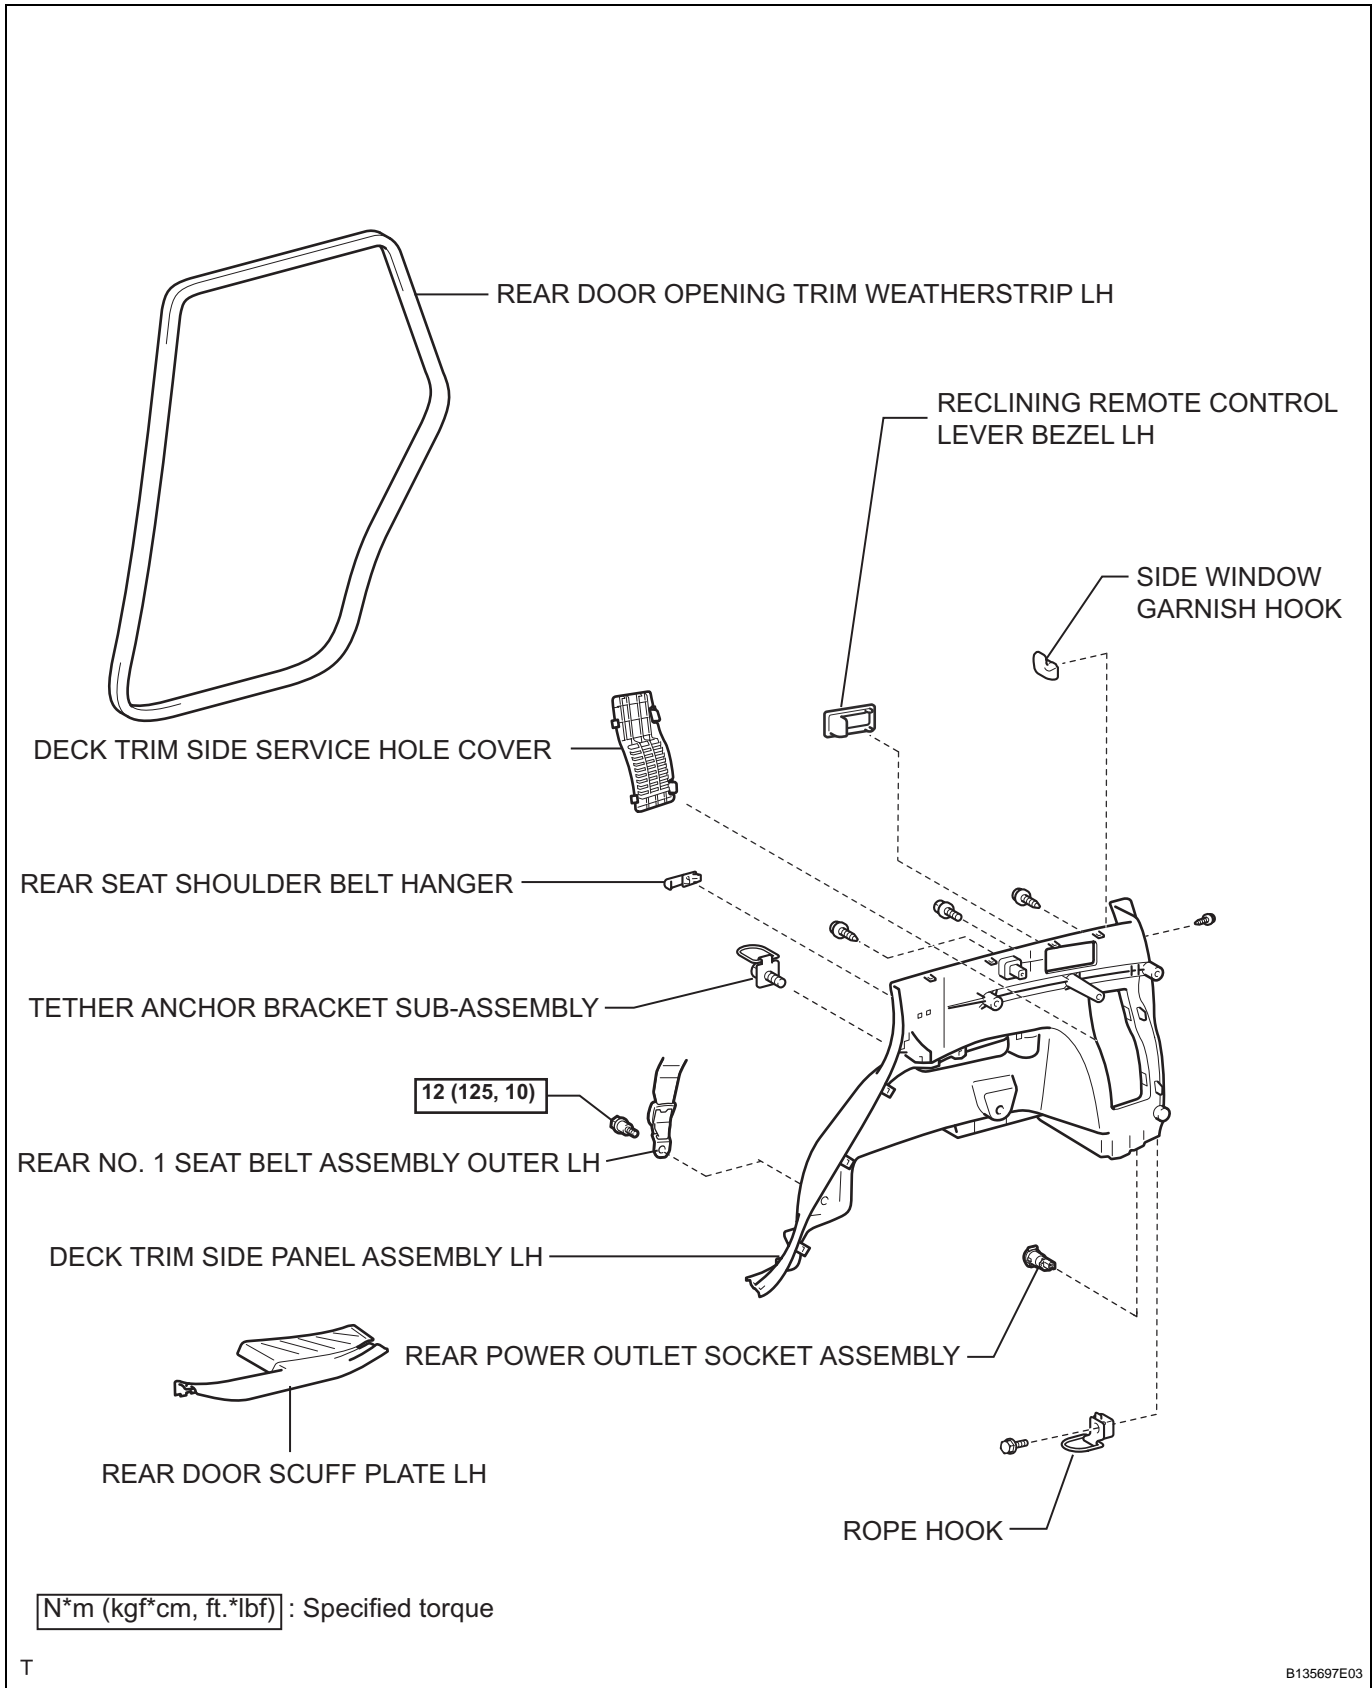

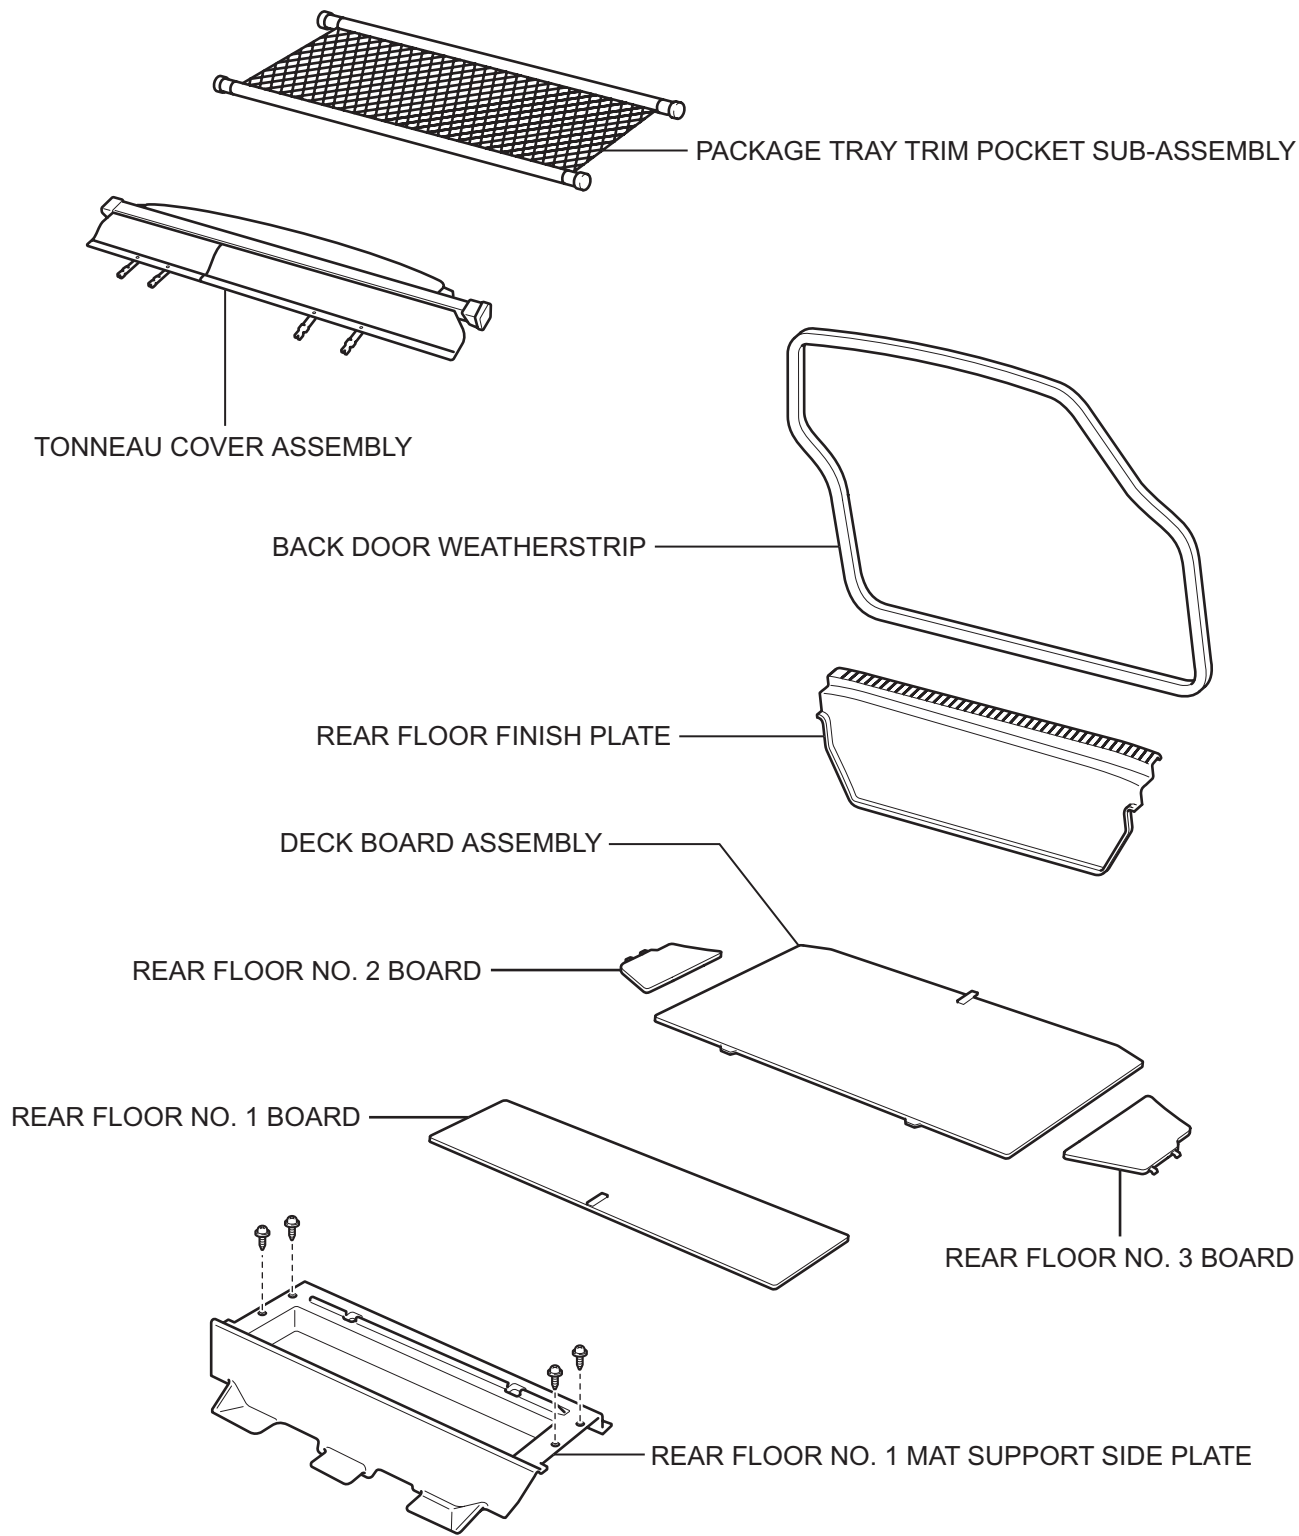


REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE REAR DOOR SCUFF PLATE LH (See page [IR-26](#))
3. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH
4. REMOVE PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY
5. REMOVE TONNEAU COVER ASSEMBLY
6. REMOVE REAR FLOOR NO. 1 BOARD
7. REMOVE DECK BOARD ASSEMBLY
8. REMOVE REAR FLOOR NO. 3 BOARD
9. REMOVE REAR FLOOR NO. 2 BOARD
10. REMOVE REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE (See page [IR-31](#))
11. REMOVE BACK DOOR WEATHERSTRIP
12. REMOVE REAR FLOOR FINISH PLATE (See page [IR-31](#))
13. REMOVE RECLINING REMOTE CONTROL LEVER BEZEL LH
14. REMOVE TETHER ANCHOR BRACKET SUB-ASSEMBLY
15. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [IR-32](#))
16. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (w/o Rear No. 2 Seat) (See page [IR-32](#))
17. REMOVE REAR POWER OUTLET SOCKET ASSEMBLY
 - (a) Detach the 2 claws fittings and remove the socket.

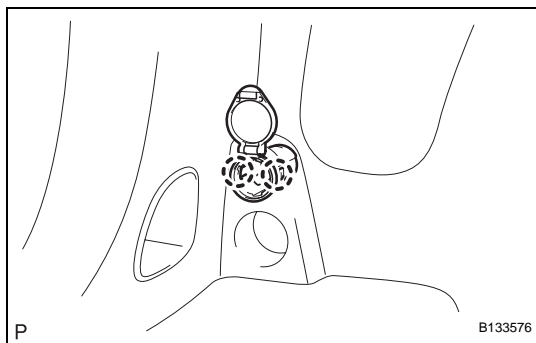

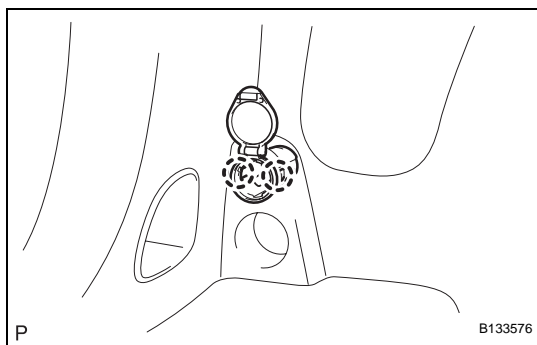

INSTALLATION

1. **INSTALL REAR POWER OUTLET SOCKET ASSEMBLY**
(a) Attach the 2 claw fittings to install the socket.
2. **INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/ o Rear No. 2 Seat) (See page [IR-52](#))**
3. **INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [IR-53](#))**
4. **INSTALL TETHER ANCHOR BRACKET SUB-ASSEMBLY**
5. **INSTALL RECLINING REMOTE CONTROL LEVER BEZEL LH**
6. **INSTALL REAR FLOOR FINISH PLATE (See page [IR-55](#))**
7. **INSTALL BACK DOOR WEATHERSTRIP**
8. **INSTALL REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE (See page [IR-55](#))**
9. **INSTALL REAR FLOOR NO. 2 BOARD**
10. **INSTALL REAR FLOOR NO. 3 BOARD**
11. **INSTALL DECK BOARD ASSEMBLY**
12. **INSTALL REAR FLOOR NO. 1 BOARD**
13. **INSTALL TONNEAU COVER ASSEMBLY**
14. **INSTALL PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY**
15. **INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH**
16. **INSTALL REAR DOOR SCUFF PLATE LH (See page [IR-59](#))**
17. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**